DC Wall Control

Orientation Installation

The Claro Wall Control is designed to suit most common Australian wall-mounting systems.

The control can be installed in either a vertical or horizontal orientation. During installation, the isolation switch can be rotated to ensure the user interface remains correctly aligned regardless of the mounting position. Please refer to the Wall Control Installation Manual supplied with the fan or visit **www.clarofans.com.au** for further information.

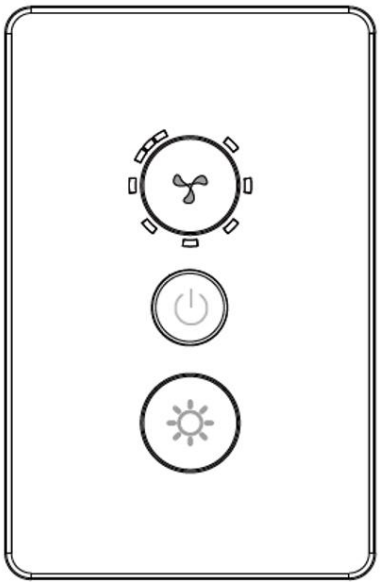
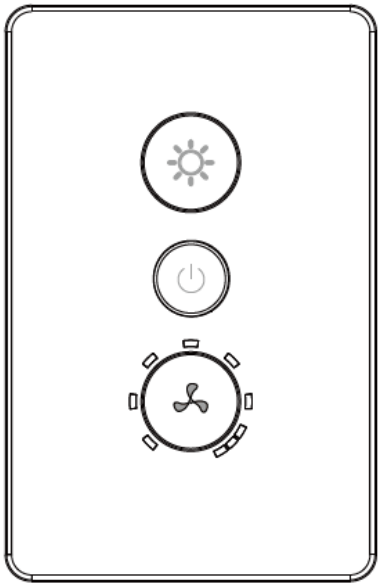
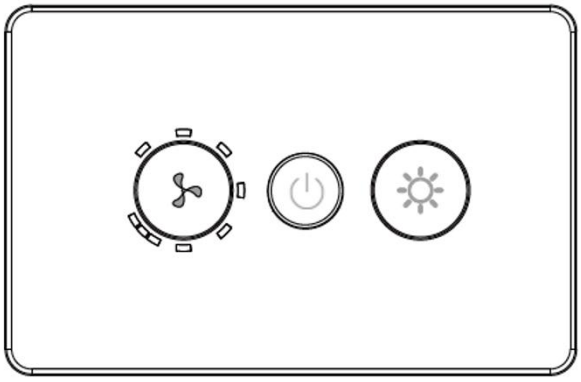
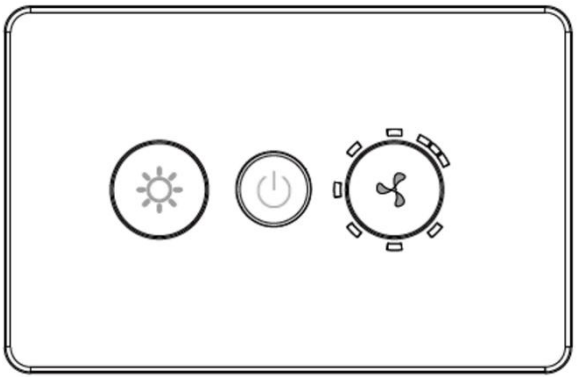
The Claro Wall Control supports four (4) installation orientations, allowing the preferred configuration to be selected during installation. Please refer to the table below to identify the four available orientation options.

By default, the Claro Wall Control is factory configured in a vertical orientation with the fan control knob positioned at the top.

VERSION 1.0

Table below outlines the four available installation orientations for the Claro Wall Control. The installer may select the preferred orientation during installation to suit the mounting location and user preference.

The factory default configuration is shown as: **Vertical, with the fan control knob positioned at the top.**

<table>
<tr><td rowspan="2">Vertical orientation</td><td>Fan knob positioned at the top.
This is the factory default setting.
</td><td>Fan knob positioned at the bottom.
</td></tr>
<tr><td>Fan knob positioned on the left.
</td><td>Fan knob positioned on the right.
</td></tr>
</table>